

Turbocharger (TC) boost pressure sensor

Component disconnected

Fig. 86634

Terminals	Condition	Typical value	Note
3 & earth	Ignition ON	5 V	5

Notes

5. Checking supply voltage.

Turbocharger (TC) boost pressure sensor

Component connected

Fig. 25973

Terminals	Condition	Typical value	Note
1 & earth	Ignition ON	1,75 V	6
1 & earth	Engine idling	1,78 V	
1 & earth	Engine running - accelerator pedal briefly fully depressed	2,7 V (briefly)	

Notes

6. Checking signal.

